VOZWEI



VM5 Series of Molded Case Circuit Breaker

Product Specification

1. Application

The VM5 series of moulded case circuit breakers (referred to as circuit breakers) have a rated insulation voltage up to 1000V and apply to circuits with the AC 50Hz/60Hz, the rated working voltage AC800V or AC1000V. The circuit breakers are used for distributing power, solar energy, wind power while protect the overload, short circuit and under-voltage (with a under-voltage release) of lines and power units as well as the infrequent starting, braking, overload and short circuit of motors.

The circuit breaker has an isolating function with the corresponding symbol of Comply with standards: IEC60947-2, GB/T 14048.2.

- Tailored for photovoltaic and energy storage systems
- With ultra-high breaking capacity
- Working voltage up to 1000V
- With excellent anti damp heat and dew solidification capabilities
- Strong ability to adapt to alternating changes in high and low temperatures
- With thermal and magnetic adjustability

2. Picture of the product



Model Selection Guide

3. Specification and model description

VM5 -	320	HU	М	320	/ TM	D /	3	1	AX/SHT
1	2	3	4	5	6		7		8
SN		Name							Specification
1	Desigr	n code		VM5	i: Design	ode			
2	Frame	e rating			: 320A : 630A				
3	High v	oltage		HU:	Hight vol	tage			
4	Breaki	ing capaci	ty	L, M	L, M				
5	Rated	current		63A	63A~630A				
6	Protec	ction unit t	:ype						ower distri able unit (Fo
7	Numb	er of poles	S	3P					
				Con	nection a	ccesso	ories		Empty: Fi
8	with''/	sories (sep /'' betweer ent access	n	Elec	ctrical acc	essori	es		AL: Alarm AX: Auxili SHT: Shu
			,	Expa	ansion ac	cessor	ies		K6: Phase K11: Insu

* Electrical accessories

Accessories	Voltage
SHT Shunt release	AC230V AC400V DC220V AC/DC110V DC24V

If the accessory voltage and voltage control loop is inconsistent, please use indicate the accessory voltage after accessory.

Example

VM5-630HUM630/TMD/3/AX/SHT (AC230V)
Meaning: VM5 series circuit breaker; the frame level is 630; 3 poles; rated current is 630A; fixed rear connection; accessory contains auxiliary contact and shunt release with voltage (AC230V).

4. Accessories

Combined mode of electrical accessories



	Model	VM5-320HU	VM5-630HU
Accessory code	Accessory name Poles	3	3
AL	Alarm contact		
SHT	Shunt release		
AX	Auxiliary contact		000
AX+SHT	Shunt release and alarm contact		
AL+SHT	Shunt release and alarm contact		
AL+AX	Auxiliary contact and alarm contact	• 00	
AX+AL+ SHT	Shunt release, auxiliary contact and alarm contact		
	Without accessory		

Main Electrical Characteristics

5. Main Electrical Characteristics

			mer ma			
Rated current	А	63, 80, 100, 125, 140, 160, 180, 200, 225, 250, 320 315, 350, 400, 500, 6			100, 500, 630	
Pole number		3				
Rated operating voltage	AC50∼60Hz (V)		800,	1000		
Rated insulation voltage	V		10	00		
Rated impulse withstand voltage Uimp	kV		8	3		
Breaking capacity		L	М	L	М	
Illtimate short sirewit brooking/Isu)	AC800V	30	50	50	50	
Ultimate short-circuit breaking(Icu)	AC1000V	15	30	15	18	
Sonice short circuit breaking/Iss	AC800V	30	50	36.5	50	
Service short-circuit breaking(Ics)	AC1000V	12	18	15	18	
Mechanical durabillity	Times	12	000	80	000	

VM5-320HU

1000

1000

Have isolation function

 $255 \times 140 \times 122.5$

 $185 \times 112.5 \times 114.5$

Thermally adjustable $(0.7 \sim 1.0)$

Thermally adjustable $(0.7\sim1.0)$

Magnetic adjustable (5∼10)

Magnetic fixation (10In)

Note:

Electrical durabillity

Isolatiion function

Optional trip unit

 $(H \times W \times D)$

Outline dimension (mm)

VM5-320: 63A is thermally adjustable magnetic fixation, 80~320A is thermo-magnetic adjustable;

TMD

TAL

Times

Times

AC800V

AC1000V

VM5-630: Only thermo-magnetic adjustable;

TMD/TAL: Data sheet of protection characteristics


Rated current	Inverse time acting characteristic 1.05In(Cold state) Not acting time	(Ambient air temperature +40°C) 1.3In(Cold state) Not acting time	Instantaneous acting current
In ≤ 63	≥ 1h	<1h	TMD: 5~10±20%
63 <in 800<="" td="" ≤=""><td>≥ 2h</td><td><2h</td><td>TAL: 10In±20%</td></in>	≥ 2h	<2h	TAL: 10In±20%

Derated coeffcient of rated current

Circuit Breaker Model	+40°C	+45°C	+50°C	+55°C	+60°C	+65°C	+70°C
VM5-320HU	1.0 Ir	0.98 Ir	0.96 Ir	0.94 Ir	0.92 Ir	0.91 Ir	0.88 Ir
VM5-630HU	1.0 Ir	0.97 Ir	0.95 Ir	0.93 Ir	0.91 Ir	0.89 Ir	0.87 Ir

Derated coefficient of high altitude of VM5 series MCCB

Item	Parameter							
Elevation	2000	2500	3000	3500	4000	4500	5000	
Power frequency withstand voltage	3500	3500	3200	3000	2800	2750	2500	
Isolation voltage	1250	1250	1250	1140	1140	1140	1140	
Breaking capacity correction factor	1	1	0.9	0.85	0.8	0.75	0.7	
Working current correction factor	1	1	0.98	0.97	0.96	0.95	0.94	

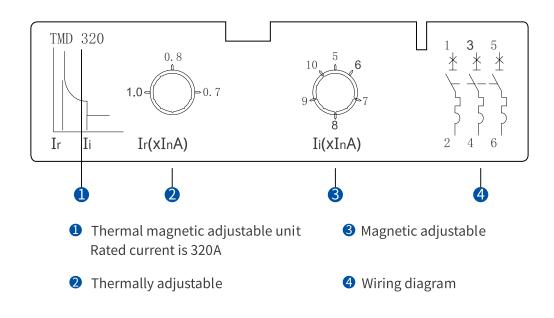


Normal Working Environment of Circuit Breaker


6. Normal Working Environment of Circuit Breaker


- The altitude of the installation site doesn't exceed 5000m. See the above 'Derated coefficient of high altitude of VM5 series MCCB' table.
- Operating environment temperature: -40 °C~+70 °C, with an average value of no more than +35 °C within 24 hours. If the ambient temperature is higher than +40°C, See the above 'Derated coeffcient of rated current' table .
- Its relative humidity at an ambient temperature of +40°C should not exceed 50%. A higher relative humidity is allowed at a lower temperature. For example, the relative humidity at 20°C can reach 90%; for frost due to temperature change, the corresponding measures should be taken.
- The product can withstand the effects of wet air, salt mist, oil mist and mould.
- The installation category of the circuit breaker connected to the main loop is: Category III (power distribution and control level), The installation category of the circuit breaker not connected to the main loop is: Category II (load level).
- The pollution level is Level 3.
- Degree of protection: IP 20.
- The product should be installed in places that are free from explosive media, media corrosive to metal, insulation damaging gas, and conductive dust, which should be also avoided from snow and rain.
- In case of stricter user conditions than the above description, negotiate with the manufacturer.

7. Size and Connection

VM5-320HU series dimensions and installation

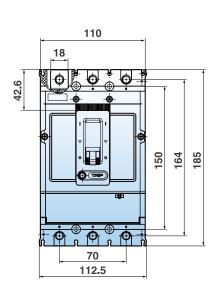


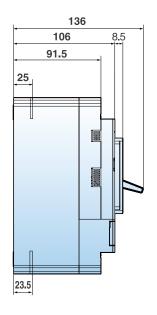


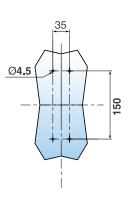


For toggling handle


VM5-320HU series dimensions with terminal cover

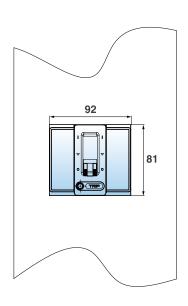


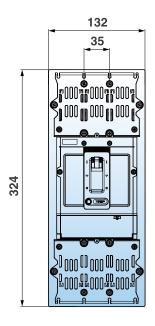


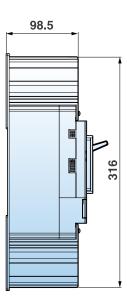

VM5-630HU series dimensions and installation

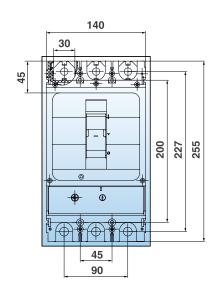


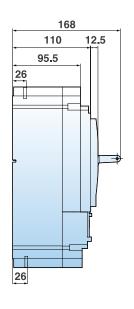


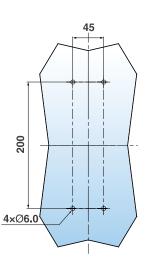


For toggling handle

VM5-630HU series dimensions with terminal cover

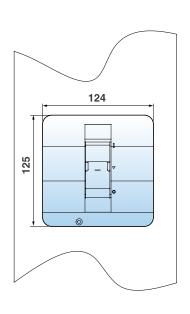

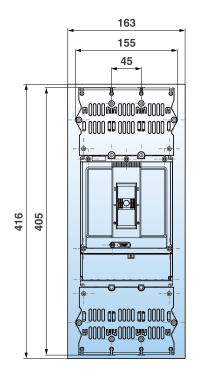

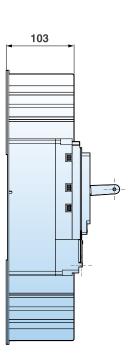


Safty distance

VM5-320HU

Safty distance

Minimum distance between two adjacent circuit breakers

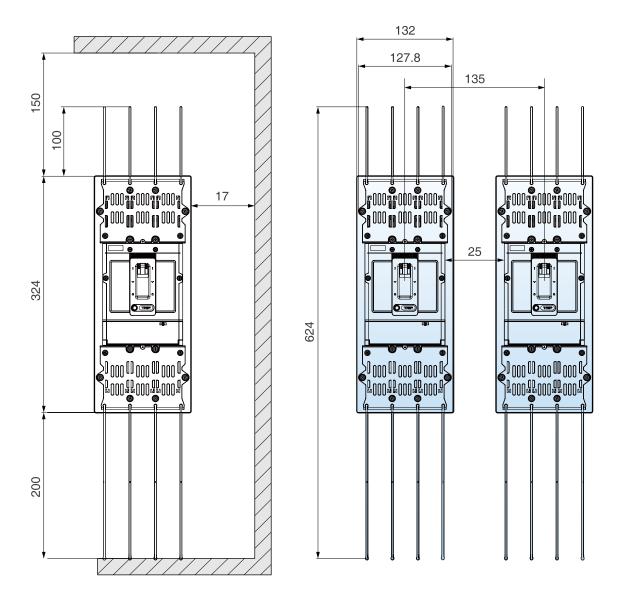


Note: There are 8 phase separators as standard, the top is short and the bottom is long, When the number of circuit breakers installed side by side is≥ 2, please keep the installation position of the interphase clapboard of the side phase consistent (all installed on phase A side or phase C side), 1 long and 1 short (phase separator) should be added for the side phase of the circuit breaker close to the metal cabinet.

Short terminal shield rear connected

150

Minimum distance between circuit breaker and front panels

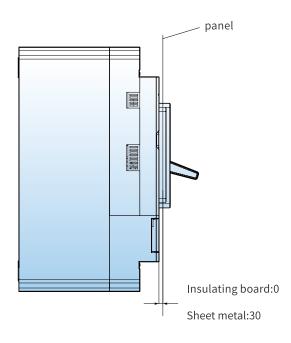



Safty distance

VM5-630HU

Safty distance


Minimum distance between two adjacent circuit breakers

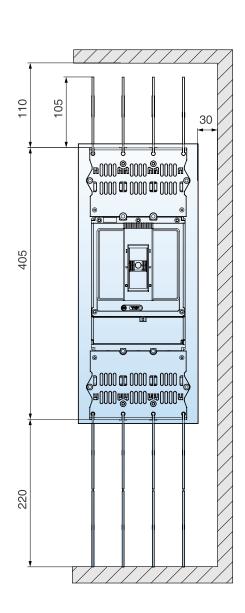

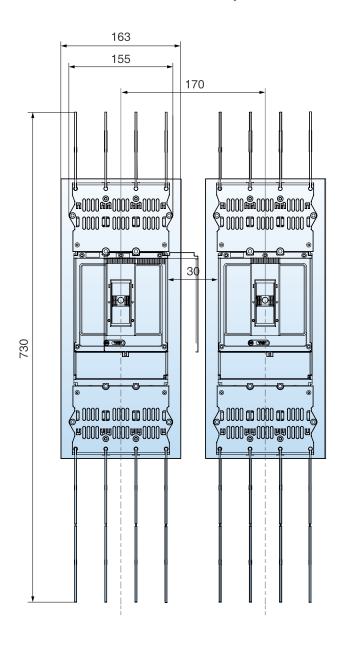


Note: There are 8 phase separators as standard, the top is short and the bottom is long, When the number of circuit breakers installed side by side is≥ 2, please keep the installation position of the interphase clapboard of the side phase consistent (all installed on phase A side or phase C side), 1 long and 1 short (phase separator) should be added for the side phase of the circuit breaker close to the metal cabinet.

Short terminal shield rear connected

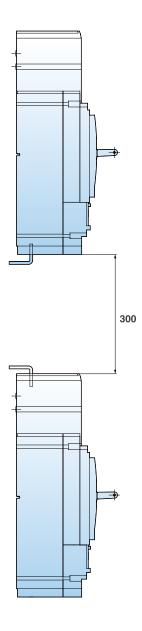

Minimum distance between circuit breaker and front panels

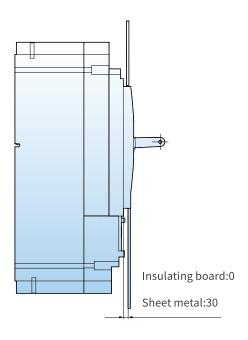

Cross-sectional area of wire


Cross-sectional areas of connection wiring with different rated currents

Rated current (A)	10	16 20	25	32	40 50	63	80	100	125 140	160	180 200 225	250	315 350	400
Rated current (mm²)	1.5	2.5	4	6	10	16	25	35	50	70	95	120	185	240


Datad surrent (A)	Ca	ble	Copper bar			
Rated current (A)	Sectional area (mm²)	Quantity	Size	Quantity		
500	150	2	30×5	2		
630	185	2	40×5	2		

Fixed connection

Terminal part

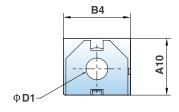


Conductor section

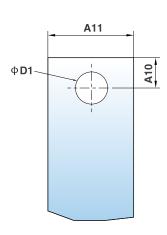


Model	B4	A10	A11	A12	ФD1
VM5-320	24	20.5	22	9.5	8.5
VM5-630	32	30	30	15	11

Wiring diagram

8. Wiring diagram

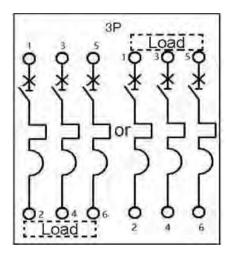

9. Accessory function description

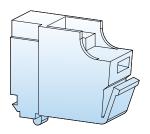

Alarm contact (AL)


Alarm contact (AL)

Function

The product outputs alarm signal when it is tripped by outer excitation signal due to overload, short circuit, undervoltage, or when the release button is pressed. This function is particularly useful in an automatic system, since that a fault signal can be sent to the designated place. And the fault signal will turn on due to an internal microswitch, when circuit breaker releases. But for normal opening or closing operations, it does not have any action.

Alarm contact operating characteristics

Circuit breaker status	Alarm contact status
The statuses of open and close	B14 ————————————————————————————————————
The statuses of tripping	B14B11

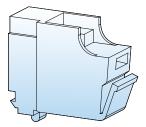

Auxiliary contact (AX)

Auxiliary contact (AX)

Function

Auxiliary switch is used for indication of remote "ON" and "OFF". Each switch contains two contacts, which share a common end of connection. The ON/OFF position depends on the state of main contact. When the circuit breaker is open, one of them is normally open, and the other is closed, or vice versa.

Auxiliary contact operating characteristics

Circuit breaker status	Auxiliary contact status
The statuses of open	F14 (F24) F11 (F21)
The statuses of close	F14 (F24) — F11 (F21) F12 (F22) — F11 (F21)

Alarm contact, Auxiliary contact rated operational current

Classification	Datad surrent I	Conventional thermal	Rated working current I _e (A)			
Classification	Rated current Inm	current Ith(A)	AC400V	DC220V		
Auxiliary contact	≤250	3	0.3	0.15		
	$400 \leq Inm \leq 1000$	3	0.4	0.2		
Alarm contact	10 ≤ Inm ≤ 1000	-	AC220V/1.0A	0.15		

ON-OFF capacity of Alarm contact and Auxiliary contact under normal conditions


Utilization		0	ON OFF Number of		Number of	Number of operation	Dayyaytina				
category			cosф			U/Ue			operation cycles	cycles per minute	Power time
AC-14	10	1	0.7	-	1	1	0.7	-	C0F0	C	≥ 0.05s
DC-13	1	1	-	6 × Pe	1	1	-	6 × Pe	6050	6	≥ 0.05s

ON-OFF capacity of alarm contact and auxiliary contact under abnormal conditions

Utilization		0	N			0	FF		Number of	Number of operation cycles per minute	Power time
category									operation cycles		
AC-14	6	1	0.7	-	1	1	0.7	-			≥ 0.05s
DC-13	1.1	1.1	-	6 × Pe	1.1	1.1	-	6 × Pe	10	6	≥ 0.05s

Note: 1. T_{0.95}=6Pe is an empirical formula in which the unit of "Pe" is watt and the unit of T_{0.95} is millisecond.

- 2. The number of operation of Auxiliary contact can equal to that of the circuit breaker, if the number of operation of circuit breaker is less than 6050.
- 3. The operation frequency and power-on time of an auxiliary contact are allowed to be the same as those of the main circuit.
- 4. If $T_{0.95}$ is more than 0.05s, the power-on time is at least $T_{0.95}$.

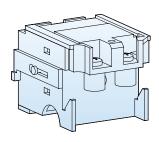

Shunt release (SHT)

Shunt release (SHT)

Function


Shunt release refers to the device which disconnect circuit breaker with current from a distance.

A shun release can cut o ffthe signal circuit automatically after tripping.

Operating Characteristics

Voltage specification	AC50Hz:110V 230V 400V DC:24V 110V 220V
Operating characteristics	When the operation voltage is 70%~110% of the rated control voltage,the shunt release should trip the circuit breaker reliably.

Connection diagram (internal accessories of a circuit breaker)

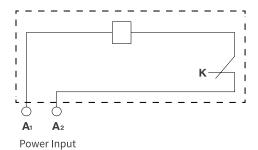

K is a microswitch closed contact of micro switch installed in series with the coil in shunt tripper, when the breaker is tripping, the switch is offby itself, when the breaker is closing, and then the switch is on.

10. Environment

The environment that comply with RoHS instruction.

11. List of installation accessories

Accessories list form(VM5-320)

SN	Name	Specification	3P Quantity/Set
1	Cross small pan-head screw	M4×100	4
2	Hexagon nut	4	4
3	Plain washer	4	4
4	Terminal screw	M8× 25	6
5	Terminal plain washer	8	6
6	Terminal spring washer	8	6
7	Terminal cover screw	M4×50	8
8	Terminal cover screw	ST2.9×9.5	4
9	Phase separator		8
10	Insulating partition		1








Accessories list form(VM5-630)

SN	Name	Specification	3P Quantity/Set
1	Cross small pan-head screw	M5×90	4
2	Hexagon nut	5	4
3	Plain washer	5	4
4	Terminal screw	M10×25	6
5	Terminal plain washer	10	6
6	Terminal cover screw	M4×65	8
7	Terminal cover screw	ST2.9×9.5	4
8	Phase separator		8
9	Insulating partition	_	1





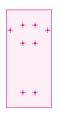

12. Circuit breaker notes

- Various characteristics and accessories of the circuit breaker are set in the factory. The
 circuit breaker, tripping unit or other accessories can only be adjusted, installed and
 maintained by the trained or qualified professionals according to the parameter
 requirements of the line design.
- Ensure that the power supply is off before installing or removing any device .
- The circuit breaker handle can be located in three positions, indicating three states on, off and free tripping. When the handle is in the free tripping position, pull the handle in the off direction when the circuit breaker is connected and on.